



# Auto-Vac™

## User's Guide



### Operation:

1. Mount the black bracket to your extractor with the screws from the wire hanger.
2. Hang the Auto-Vac on the extractor by sliding the attached bolts into the black bracket.
3. Attach the short vacuum hose to the bottom of the Auto-Vac™ and to the extractor vacuum inlet.
4. Attach the long vacuum hose to the top of the Auto-Vac™ and a cleaning tool to the other end.
5. Turn on vacuum switch (on extractor), and proceed to vacuum.
6. When finished, turn off vacuum switch, disconnect short vacuum hose from extractor, and follow normal extractor operation as explained in your extractor user's guide.

Black Bracket



H516A

4ft. Hose



H504

15ft. Hose



H295

Upholstery Tool



PC86

Crevice Tool



PC87